


# GLAZING

## Critical Areas

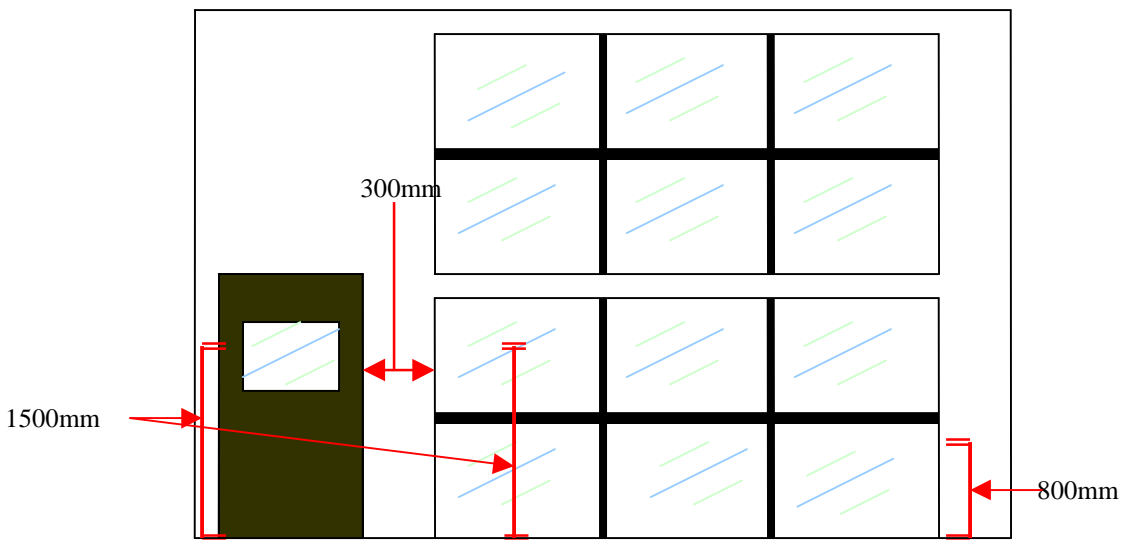

### Critical Areas

- 1: Between floor level and 800mm in walls and partitions
- 2: Between floor level and a height of 1500mm both with and adjacent to either side of the door

Adjacent = within 300mm of door

NB:

Other areas may still be high risk

E.G. – high level glazing adjacent to a playground where ball games are played